ORDER NO. DPD83090028C3

Service Manual

Turntable System

SL-H306(S)

[XA]

is the standard mark for plug-in-connector type. Products carrying this mark are interchangeable and adaptable among each other.

Area

* [XA] is available in East South Asia, Oceania, Africa, Middle Near East and Central South America.

Specifications

Specifications are subject to change without notice for further improvement.

■ General

Power supply:	For United Kingdom and Australia: 240V, AC 50 Hz For continental Europe: 220V, AC 50 Hz For others: ~110~120/220~240V, 50/60 Hz
Power consumption:	2 W
Dimensions: (W×H×D)	43×9.3×37.5 cm (16-15/16"×3-21/32"×14-3/4") {Maximum height when: dust cover is open. 43×36×41 cm (16-15/16"×14-5/32"×16-1/8")}
Weight	3.3 kg (7.3 lb.)

■ Turntable section

Type:	Semi-automatic turntable Auto return Auto stop
Drive method:	Belt drive
Motor:	DC motor
Drive control method:	DC servo control
Turntable platter:	Aliminum die-cast Diameter 30.4 cm (11-31/32 inches)
Turntable speeds:	33⅓ rpm and 45 rpm
Wow and flutter:	0.045% WRMS (JIS C5521) ±0.06% peak (IEC 98A Weighted)
Rumble:	−70 dB (IEC 98A Weighted)

■ Tonearm section

Type:	Statically-balanced straight tonearm Plug-in connector cartridge system
Effective length:	230 mm (9-1/16")
Overhang:	15 mm (19/32")
Tracking error angle:	Within 2°32′ at the outer groove of 30 cm (12") record Within 0°32′ at the inner groove of 30 cm (12") record
Effective mass:	13.5 g (including cartridge)
Stylus pressure:	1.25 g
Applicable cartridge weight:	6 g

■ Cartridge section

Type:	Moving magnet stereo cartridge
Magnet:	All laminated core
Frequency response:	10 Hz to 30 kHz 20 Hz to 10 kHz ±1 dB
Output voltage:	2.5 mV at 1 kHz, 5 cm/s. zero to peak lateral velocity (7 mV at 1 kHz, 10 cm/s. zero to peak 45° velocity [DIN 45 500])
Channel separation:	More than 22 dB at 1 kHz
Channel balance:	Within 2 dB at 1 kHz
Recommended load impedance:	47 kΩ~100 kΩ
Compliance (dynamic):	12×10^{-6} cm/dyne at 100 Hz
Stylus pressure range:	1.25 ±0.25 g (12.5 ±2.5 mN)
Weight:	6 g (cartridge only)
Replacement stylus:	EPS-24CS

Specifications subject to change without notice.
Weight and dimensions shown are approximate.

National

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

SL-H306

■ CONTENTS

	Page
LOCATION OF CONTROLS	2
SAFETY PRECAUTIONS	3
DISASSEMBLY INSTRUCTIONS	3, 4, 5,
MEASUREMENTS AND ADJUSTMENTS	6
SHEMATIC DIAGRAM	7
CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM	8
REPLACEMENT PARTS LIST	
Electrical Parts	8
Cabinet & Chassis Parts	8
Tonearm Parts	8
EXPLODED VIEWS	9, 10
Automatic Mechanism Plate	11
PACKING	12

■ LOCATION OF CONTROLS

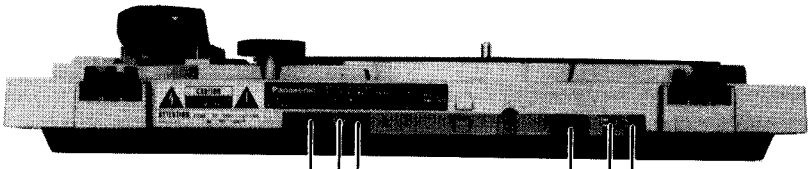

Phono output terminals (R) (L)
Ground
45 rpm speed adjustment
33 rpm speed adjustment
AC input socket

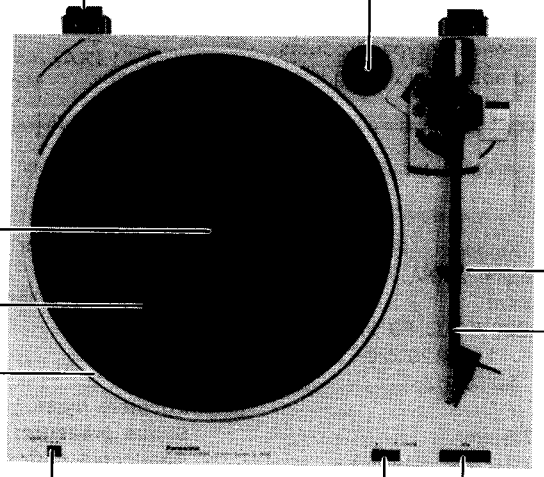

Hinge
45-rpm adaptor
Center spindle
Turntable mat
Turntable platter
Arm rest
Tonearm
Speed selector
Stop switch
Cueing control

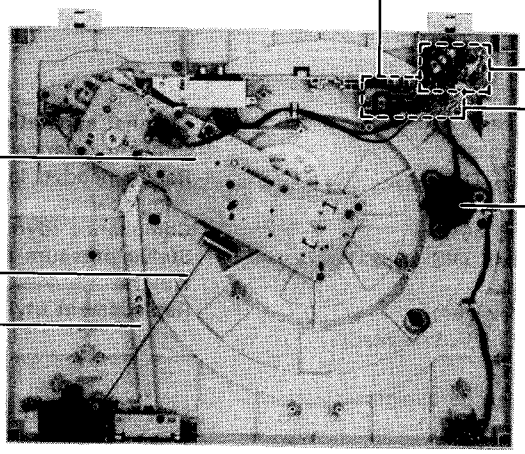

AC socket
Power transformer
Power source circuit P.C.B.
Automatic mechanism plate
Turntable Drive Motor
Stop rod
Cueing plate

ORDER NO. DPD83090028C3–A

ESPAÑOL

Turntable System

SL-H306

This booklet contains the specifications and adjusting procedures for SL-H306, written in Spanish.
File this manual together with the SL-H306 service manual (Order No. DPD83090028C3).

ESPAÑOL

■ ESPECIFICACIONES

Las especificaciones quedan sujetas a cambios sin aviso previo.
El peso y las dimensiones indicados son aproximados.

■ En general

Alimentación de corriente:	~110–120/220–240 V, 50 ó 60 Hz
Consumo de corriente:	2 W
Dimensiones: (Ancho×Alto×Prof.)	43×9,3×37,5 cm Altura máxima cuando la parte de arriba (tapa contra el polvo) está abierta. 43×36×41 cm
Peso:	3,3 kg

■ Sección del plato giratorio

Tipo:	Plato giratorio automático Retorno automático Parada automática
Método de accionamiento:	Accionamiento por correa
Motor:	Motor de corriente continua
Método de control de accionamiento:	Servocontrol por corriente continua
Platillo del plato giratorio:	Aluminio fundido Diámetro 30,4 cm
Velocidades del plato giratorio:	33-1/3 y 45 rpm
Ululaciones y trémolo:	0,045% WRMS (JIS C5521) ±0,06% cresta (IEC 98A Ponderado)
Ruido de rodadura:	−70 dB (IEC 98A Ponderado)

■ Sección del brazo sonoro

Tipo	Brazo sonoro recto equilibrado estáticamente Sistema de cartucho con conector enchufable
Longitud efectiva:	230 mm
Proyección:	15 mm
Angulo de error de seguimiento:	Inferior a 2°32′ en el surco exterior de un disco de 30 cm Inferior a 0°32′ en el surco interio de un disco de 30 cm
Masa efectiva:	13,5 g (incluyendo el cartucho)
Radio de ajuste de la presión de la aguja:	1.25 g
Radio de peso de cartucho utilizable:	6 g

■ Sección del cartucho

Tipo:	Cartucho estereofónico de imán móvil
Circuito magnético:	Núcleo totalmente laminado
Respuesta de frecuencia:	10 Hz a 30 kHz 20 Hz a 10 kHz ±1 dB
Voltaje de salida:	2,5 mV a 1 kHz Con velocidad lateral de cero a cresta de 5 cm/s [7 mV a 1 kHz Velocidad de 45° de cero a cresta de 10 cm/s (DIN 45 500)]
Separación de canales:	22 dB a 1 kHz
Equilibrio de canales:	Sin exceder 2 dB a 1 kHz
Impedancia de carga recomendada:	47 kΩ a 100 kΩ
Elasticidad (dinámica):	12×10^{-6} cm/dina a 100 Hz
Radio de presión de la aguja:	1,25±0,25 g (12,5±2,5 mN)
Peso:	6 g (cartucho sólo)
Aguja de recambio:	EPS-24CS

Las especificaciones quedan sujetas a cambios sin aviso previo.
El peso y las dimensiones indicados son aproximados.

■ MEDICIONES Y AJUSTE

• Ajuste de la altura de elevación del brazo

La allura de elevación del brazo (o sea, la distancia entre la punta de la aguja y la superificie del disco cuando el control de colocación está en la posición "▼") ha sido regulada en la fábrica aproximadamente entre 4 y 6 mm. **(Fig. 13)**
En caso que la distancia fuese demasiado abundante o demasiado escasa, girar el tornillo de ajuste hacia la derecha o hacia la izqulerda **(Fig. 14)**

Rotación hacia la derecha
– reduce la distancia entre el disco y la punta de la aguja.

Rotación hacia la izquierda
– aumenta la distancia entre el disco y la punta de la aguja.

• Ajuste de la posición para retorno automático (Fig. 15)

(Quitar la tapita de goma.)
1. Colocar la protección de la aguja en el cartucho.
2. Mover el brazo sonoro hacia el centro del disco. Con ello, aparecerá el tornillo de ajuste del retorno automático.

Cuando el brazo sonoro tienda a volver a su apoyo antes de terminar la ejecudcion:
— Girar hacia la izquierda.
En caso que el brazo sonoro no vuelva después de hader tocado el último surco del disco:
Girar hacia la derecha.

• Ajuste de velocidad rotacional

1. Poner el selector de velocidad en la posición "45".
2. Girar el VR102 con un destornillador por detrás del aparato hasta la rotacion nominal (45 r.p.m.) y verificar la rotación con un estroboscopio mientras se ajuste la velocidad. **(Fig. 16)**
3. Poner el selector de velocidad en la posición "33".
4. Girar el VR101 con un destornillador por detrás del aparato hasta la rotacion nominal (33—1/3) y verificar la rotación con un estroboscopio mientras se ajuste la velocidad. **(Fig. 16)**

Printed in Japan
830902300 ® YW

■ SAFETY PRECAUTIONS

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.

• INSULATION RESISTANCE TEST

1. Unplug the power cord and short the two prongs of the plug with a jumper wire.
2. Turn on the power switch.
3. Measure the resistance value with ohmmeter between the jumpered AC plug and each exposed metal cabinet part, such as screwheads antenna, control shafts, handle brackets, etc. Equipment with antenna terminals should read between 3MΩ and 5.2MΩ to all exposed parts. (Fig. 1–1) Equipment without antenna terminals should read approximately infinity to all exposed parts. (Fig. 1–2)

Note: Some exposed parts may be isolated from the chassis by design. These will read infinity.

4. If the measurement is outside the specified limits, there is a possibility of a shock hazard. The equipment should be repaired and rechecked before it is returned to the customer.

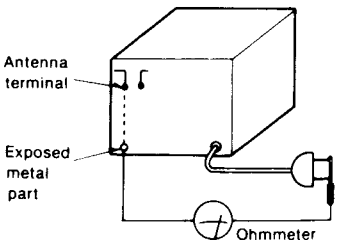

Resistance = 3MΩ—5.2MΩ

(Fig. 1–1)

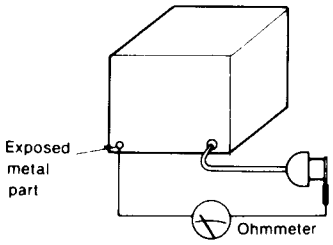

Resistance = Approx ∞

(Fig. 1–2)

■ DISASSEMBLY INSTRUCTIONS

• How to remove the cartridge (Fig. 2)

1. Fix the tonearm on the arm rest.
2. Remove the cartridge setscrew ❶
3. Pull out the cartridge with care not to let the hand touch the stylus tip.
4. When setting the cartridge, match the cartridge pin with the tonearm connector, and completely insert the cartridge and tighten the setscrew.

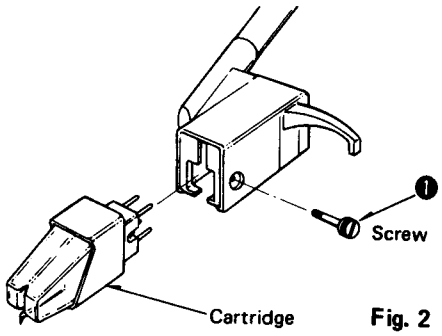

Fig. 2

• How to remove the stylus (Fig. 3)

1. Pull out the stylus with care not to touch the stylus tip.
2. When setting the stylus, match the stylus sleeve with the fitting hole in the cartridge body, and completely insert the stylus and make sure that there is no gap between the stylus knob and main body.

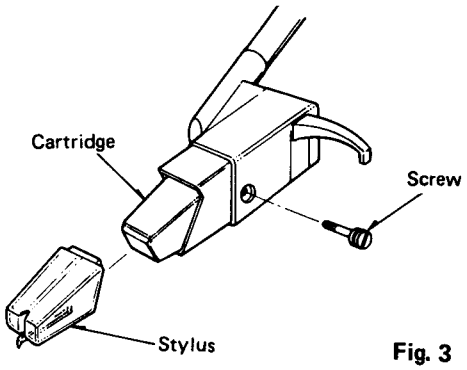

Fig. 3

• How to remove the bottom board (Fig. 4)

1. Fix the tonearm on the arm rest.
2. Remove the turntable mat, belt and turntable platter.
3. Close the dust cover, and turn over the unit with care.
4. Remove the 5 setscrews [**Fig. 4:** ❷ ~ ❻] of the bottom board.

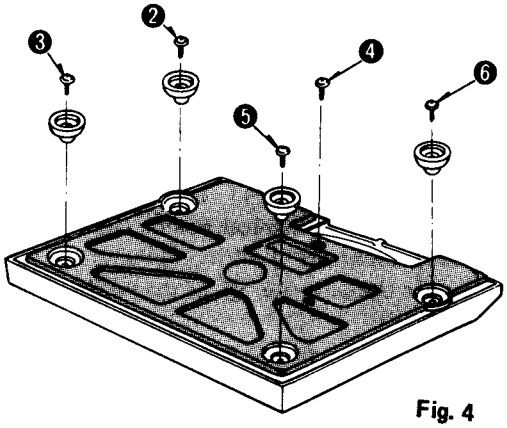

Fig. 4

• How to remove the drive circuit P.C.B. (transformer) and motor

1. Remove the bottom plate. (Refer to "How to remove the bottom board".)
2. Remove the setscrews [**Fig. 5** Ⓐ: ❼, ❽] of the P.C.B., then the drive circuit P.C.B. (transformer) and AC socket can be removed.
3. To remove the transformer from the drive circuit P.C.B., unsolder the transformer terminals and release the claw to remove the transformer from the P.C.B.
4. To remove the motor, remove the 3 setscrews [**Fig. 5** Ⓑ: ❾ ~ ⓫] which secure the main body and motor, and then unsolder the motor terminals.

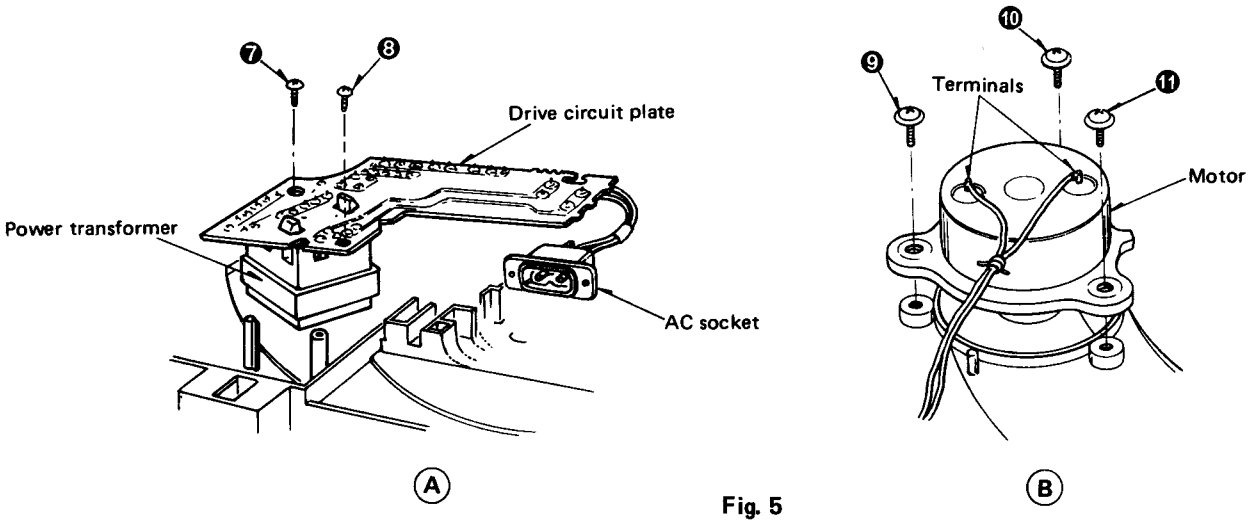

Fig. 5

• How to remove the mechanical plate (Fig. 6)

1. Remove the bottom board. (Refer to "How to remove the bottom board".)
2. Remove the 5 setscrews [**Fig. 6:** ⓬ ~ ⓰] of the mechanical plate and output terminal shielding plate, and the setscrew ⓱ of the Ground terminal.
3. When fitting the mechanical plate, do the following beforehand.
   (1) Turn the turntable shaft to rotate the main gear until it comes to the no-gear part. **(Fig. 7)**
   (2) Shift the cueing lever of the mechanical board to the "cueing up" position. **(Fig. 8)**

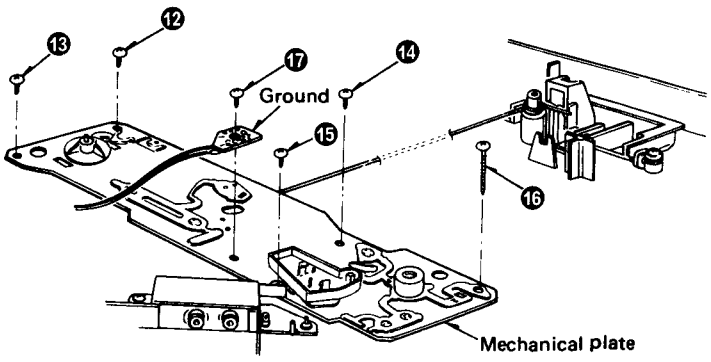

Fig. 6

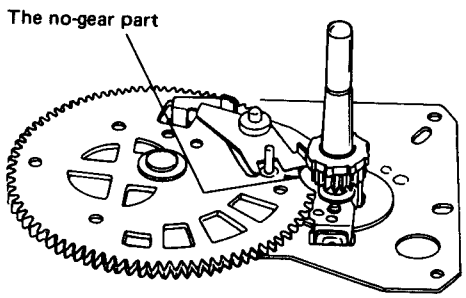

Fig. 7

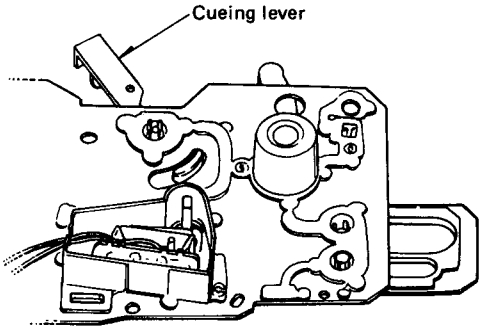

Fig. 8

• How to remove the Pu fixing plate (Fig. 9)

1. Remove the bottom board. (Refer to "How to remove the bottom board".)
2. Remove the mechanical plate. (Refer to "How to remove the mechanical plate".)
3. Remove the setscrew ⑱ of the Pu fixing plate.

• How to remove the tonearm (Fig. 10)

1. Remove the Pu fixing plate. (Refer to "How to remove the Pu fixing plate".)
2. Unsolder the 5 Pu leads of output terminal.
3. Remove the 2 setscrews [**Fig. 10:** ⑲ ~ ⑳] of the lift plate.

Pu lead wiring method

White	L CH (+) terminal
Blue	L CH (–) terminal
Red	R CH (+) terminal
Green	R CH (–) terminal
Black	Ground terminal

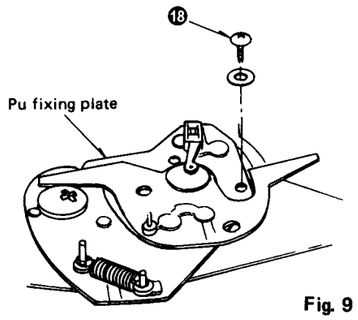

Fig. 9

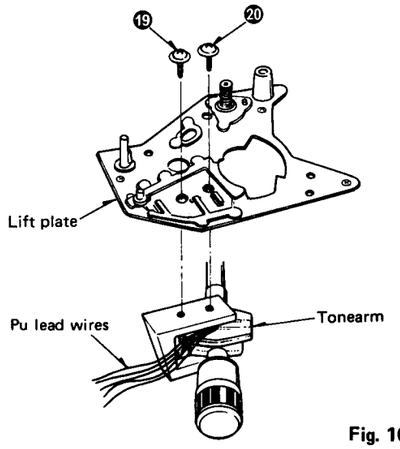

Fig. 10

• How to remove the lift plate (Fig. 11)

1. Remove the Pu fixing plate. (Refer to "How to remove the Pu fixing plate".)
2. Remove the 3 setscrews [**Fig. 11:** ㉑ ~ ㉓] of the lift plate.

• How to remove the arm lift

1. Remove the Pu fixing plate. (Refer to "How to remove the Pu fixing plate".)
2. Remove the lift plate (Refer to "How to remove the lift plate".)
3. Remove the setscrew [**Fig. 12:** ㉔] of the arm lift cover.
4. Remove the washer [**Fig. 12:** ㉕] from the arm lift rod.
5. Pull out the arm lift rod in the direction of the arrow.

Caution:

★ Be sure to adjust the arm lift height. (Refer to page 6 **Fig. 13** .)

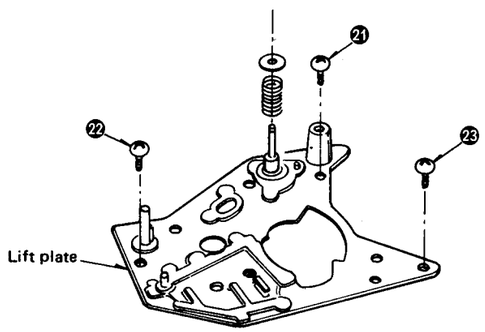

Fig. 11

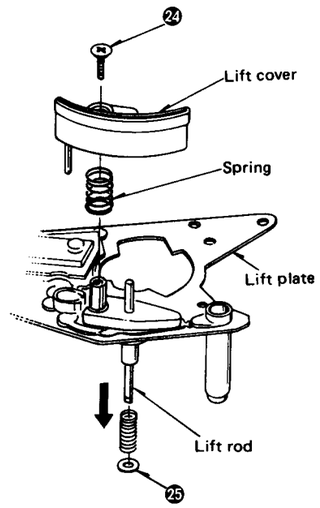

Fig. 12

■ MEASUREMENTS AND ADJUSTMENT

• Arm-lift height adjustment

The arm-lift height (distance between the stylus tip and the record surface when the cueing control is at the " ▼ " position) has been adjusted at the factory to approximately 4 to 6 mm (5/32" ~ 1/4"). **(Fig. 13)**

If the clearance is too narrow or too wide, turn the adjustment screw clockwise or counterclockwise. **(Fig. 14)**

Clockwise rotation

–distance between the record and stylus tip is decreased.

Counterclockwise rotation

–distance between the record and stylus tip is increased.

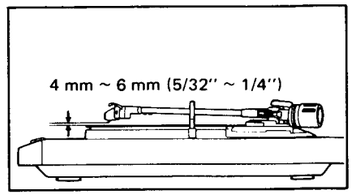

Fig. 13

• Adjustment of automatic return position (Fig. 15)

(Remove the rubber cap.)

1. Put the stylus protector on the cartridge.
2. Move the tonearm toward the center of the record.
   The auto-return adjustment screw will appear.

If the tonearm tends to return to the arm rest before the play has hinished.

–turn counterclockwise.

If the tonearm fails to return after the final groove.

–turn clockwise.

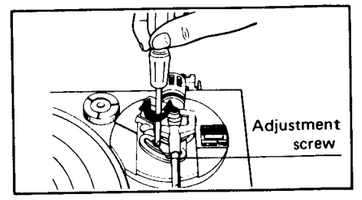

Fig. 14

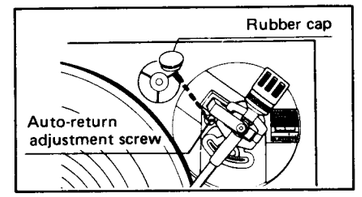

Fig. 15

• Adjustment of rotational speed

1. Set the speed selector switch to the "45" position.
2. Turn the VR101 with a screw driver from the back of the set to the rated rotation (45 rpm) and check the rotation with a strobe while adjusting the speed. **(Fig. 16)**
3. Set the speed selector switch to the "33" position.
4. Turn the VR102 with a screwdriver from the back of the set to the rated rotation (33–1/3 rpm) and check the rotation with a strobe while adjusting the speed. **(Fig. 16)**

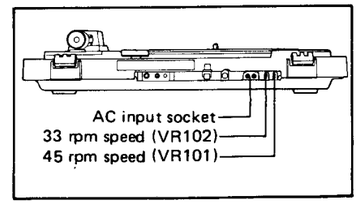

Fig. 16

■ SCHEMATIC DIAGRAM (This schematic diagram may be modified at any time with the development of new technology.)

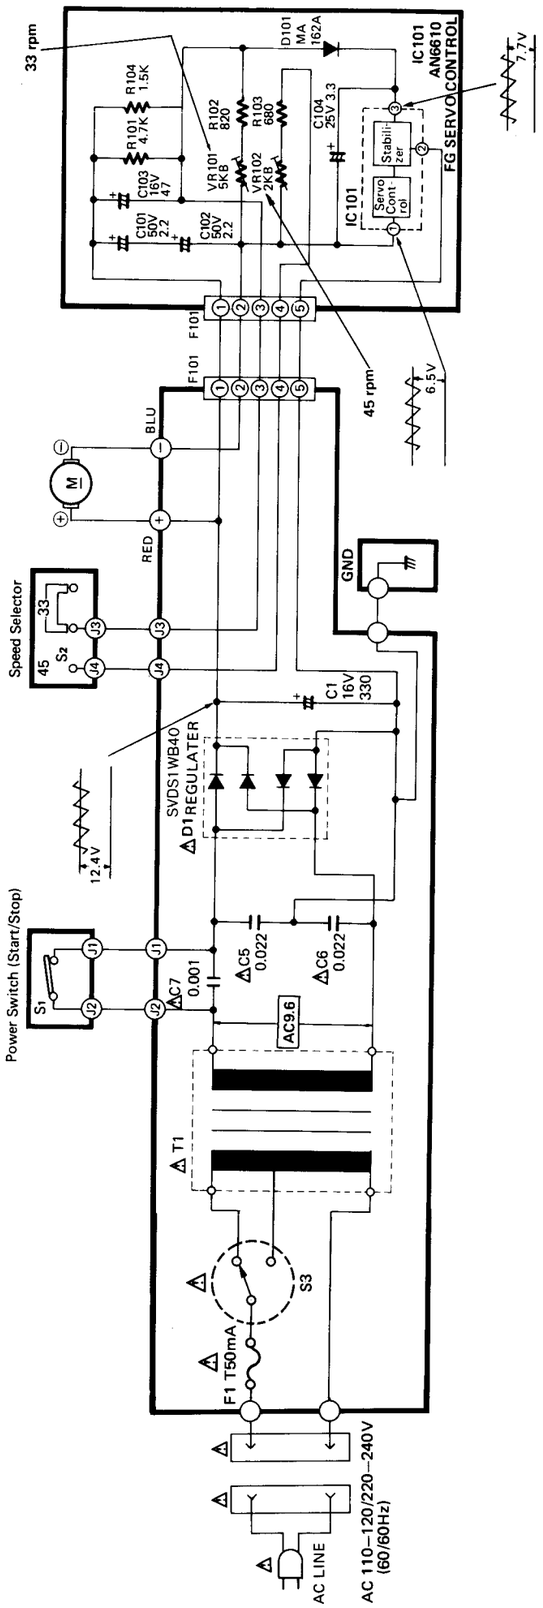

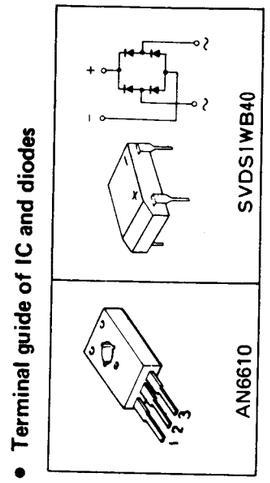

● Terminal guide of IC and diodes

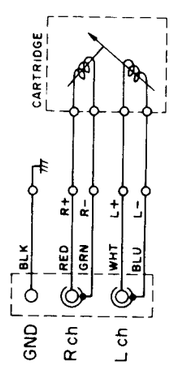

Notes: 1. **S1** : Power (Arm) switch in **"on"** position,
2. **S2** : Speed selector switch in **"33-1/3 rpm"** position
33-1/3 rpm ↔ 45 rpm
3. **S3** : Voltage selector switch in **"220–240V"** position
110V–120V ↔ 220V–240V
4. The value and waveform in □ are of the reference voltage for the turntable rotation (33-1/3 rpm) of this umit, measured by DC voltmeter (high impedance) and osilloscope on the basis of chasis.

Therefore the measured value may include some error depending on the internal impedance of DC circuit tester and other conditions.
5. Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

■ CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM

Ground (Earth Lines)

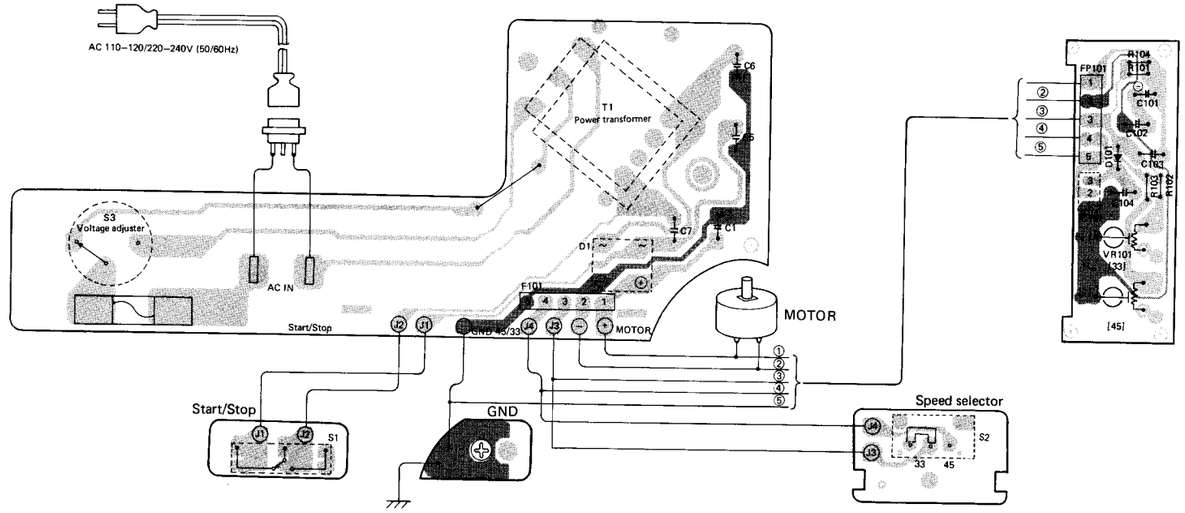

■ REPLACEMENT PARTS LIST

Notes: 1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
2. Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety.
When replacing any of these components, use only manufacturer's specified parts.
3. Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.
4. The "Ⓢ" mark is service standard parts and may differ from production parts.

Ref. No.		Part No.	Description
INTEGRATED CIRCUIT			
IC101		AN6610	Servo Control
DIODES			
D1	⚠	SVDS1WB40	Rectifier
D101	Ⓢ	MA162A	Diode
VARIABLE RESISTORS			
VR101		EVN51AA00B53	Speed adjustment 5kΩ (B)
VR102		EVN51AA00B23	Speed adjustment 2kΩ (B)
SWITCHES			
S1		SFDSHSW0739	Speed Selector
S2	⚠	SFDSSS5GLP	On/Off
S3	⚠	SFDSHXW02066	Voltage selector
FUSE			
F1	⚠	XBA2C005T1W	T50mA, 250V
POWER TRANSFORMER			
T1	⚠	SLT35K63E	Power Source
RESISTORS			
R101	Ⓢ	ERD25FJ472	Carbon 4.7kΩ 1/4W ±5%
R102	Ⓢ	ERD25FJ821	Carbon 820Ω 1/4W ±5%
R103	Ⓢ	ERD25FJ681	Carbon 680Ω 1/4W ±5%
R104	Ⓢ	ERD25FJ152	Carbon 1.5kΩ 1/4W ±5%

Ref. No.		Part No.	Description
CAPACITORS			
C1	Ⓢ	ECEA1CS331	Electrolytic 330μF, 16V
C5,6	⚠	ECKD1H223MD	Ceramic 0.022μF 50V, ±2%
C7	⚠	ECKD2H102KB	Ceramic 0.001μF, 500V
C101, 102		ECEA50Z2R2	Electrolytic 2.2μF, 50V
C103		ECEA1ES470	Electrolytic 47μF, 25V
C104		ECEA50Z3R3	Electrolytic 3.3μF, 50V

Ref. No.	Part No.	Description & Pcs
CABINET AND CHASSIS PARTS		
1	SFTGH35M01	Turntable Mat (1)
2	SFTEZ15R01	Turntable Platter (1)
3	SFGBZ15R01	Belt (1)
4	SFADH36M01	Dust Cover (1)
5	SFGZZ15R01	Cushion Rubber, Dust Cover (2)
6	SFATZ15R01	Hinge (2)
7	SFACH36X01	Cabinet (1)
9	SFNNH36X01	Name Plate (1)
10	SFGK170–01	Rubber Cap (1)
11	SFKKH36M01	Plate, Anti-skating Adjustment (1)

Ref. No.		Part No.	Description & Pcs
12		SFDJZ15R01	Jack, Phono Output (1)
13		SFUPZ15R03	Lever, Cueing (1)
14		SFQHZ15R01	Spring, Stop Knob (1)
15		SFKTH36M01	Knob, Stop (1)
16		SFUZZ15R01	Rod, Stop (1)
17		SFKTH36M03	Knob, Cueing (1)
18		SFQPZ15R02	Spring, Cueing Knob (1)
19		SFYB–5–32	Ball, Cueing Knob Spring (1)
20		SFUPZ15R05	Plate, Cueing Knob (1)
21		SFMHZ15R01E	Motor Ass'y, Drive (1)
22		SFUMZ15R01	Cushion Rubber, Drive Motor (1)
23		SFKTH36M02	Knob, Speed Selector (1)
24	⚠	SFDJHSC0509	AC Socket (1)
25		SFAUZ15R01	Bottom Board (1)
26		SFGAZ15R01	Audio Insulator (Front) (2)
27		SFGAZ15R02	Audio Insulator (Rear) (2)
TONEARM PARTS			
31		SFPAM30601A	Tonearm Ass'y (1)
32		EPC–P24S	★ Cartridge (1)
33		EPS–24CS	★ Stylus (1)
34		SFCNC02301	Cover, Cartridge (1)
35		SFKUZ15R01	Arm Rest (1)
36		SFUPZ15R51A	Arm Base Ass'y (1)
37		SFUMZ15R58	Arm Lift (1)
38		SFQAZ15R52	Spring, Arm Lift (1)
39		SFQAZ15R53	Spring (1)
40		SFUPZ15R52A	P.U. Fixing Plate Ass'y (1)
41		SFQHZ15R51	Spring (1)
42		SFQHZ15R55	Spring (1)
43		SFGZZ15R02	Holder, Spring (1)

■ EXPLODED VIEWS

- **Automatic mechanism plate**

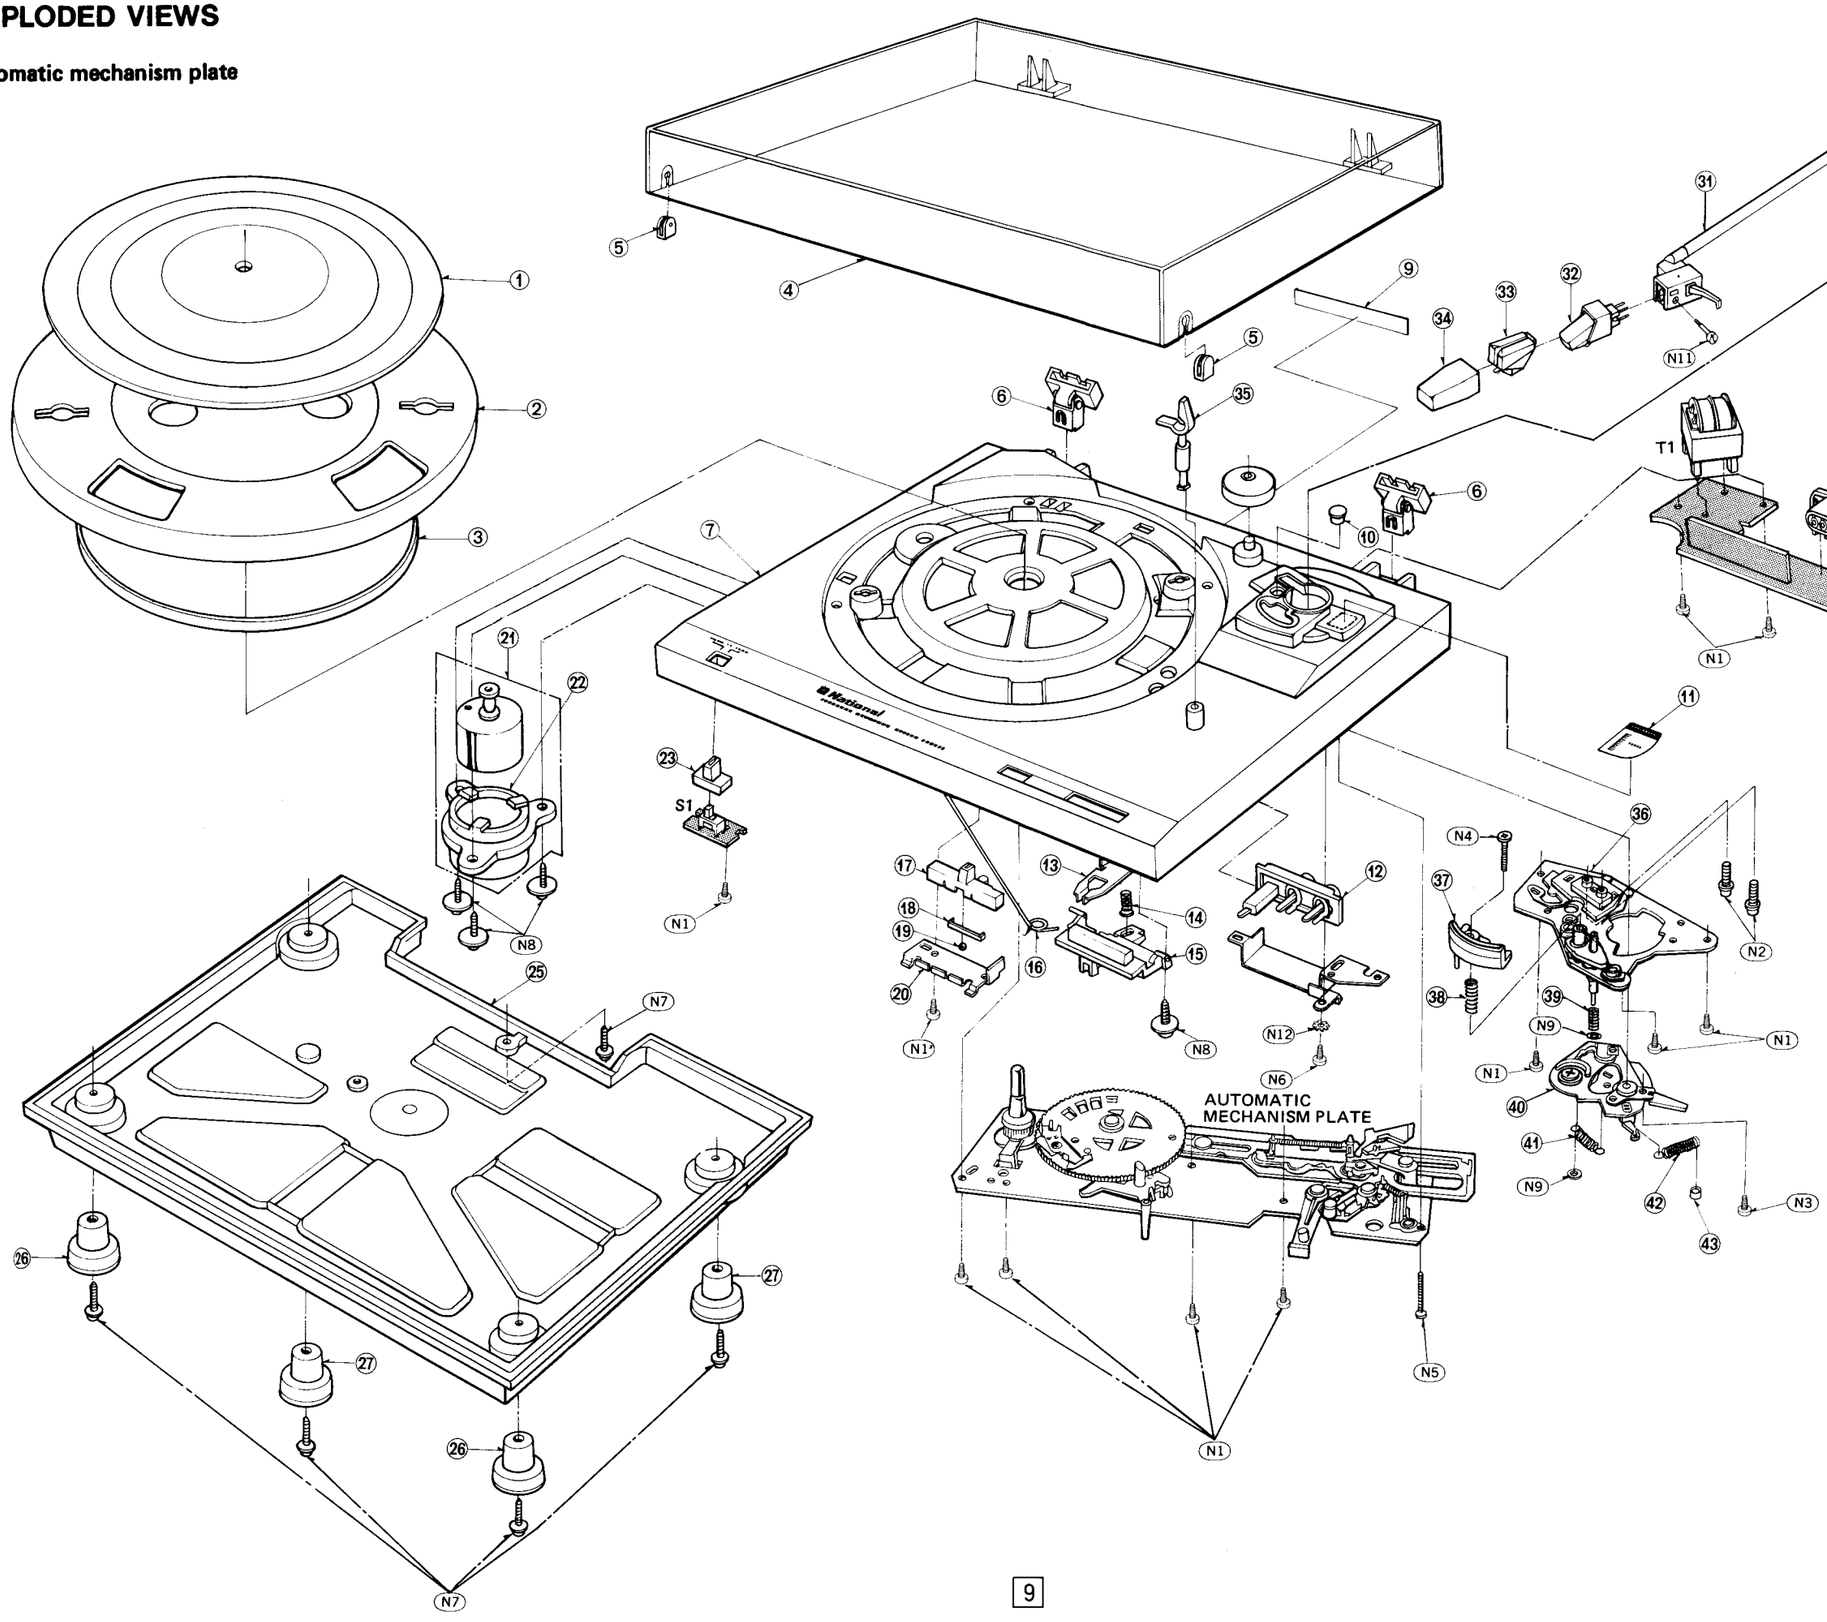

■ EXPLODED VIEWS

• Automatic mechanism plate

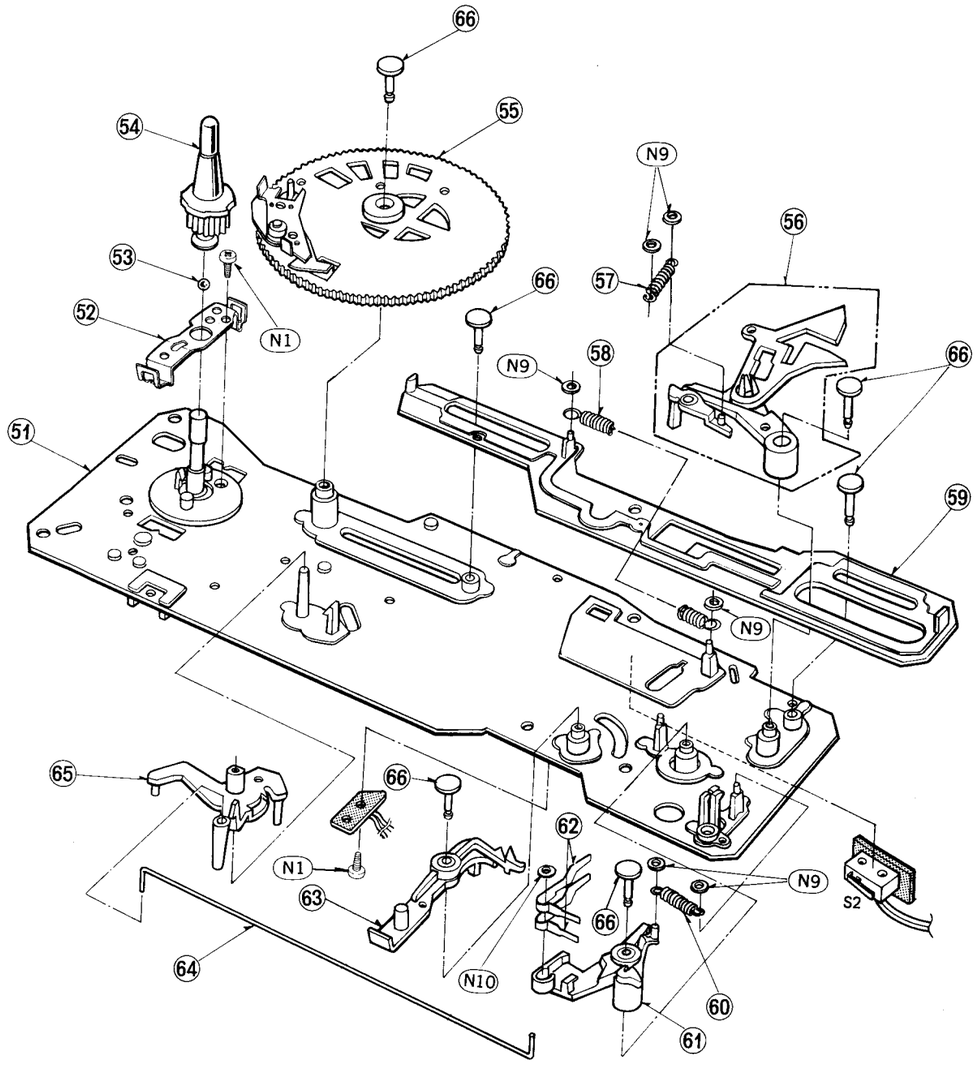

Ref. No.	Part No.	Description & Pcs
AUTOMATIC MECHANISM PLATE ASS'Y		
51	SFUKZ15R51E	Plate Ass'y, Automatic Mechanism (1)
52	SFUPZ15R55	Plate, Ground (1)
53	SFYB-5-32	Steel Ball (1)
54	SFTUZ15R51E	Shaft Ass'y, Turntable (1)
55	SFUGZ15R51E	Main Gear Ass'y (1)
56	SFUMZ15R54E	Switch Lever Ass'y, S2 (1)
57	SFQHZ15R52	Spring, Switch Lever (1)
58	SFQHZ15R54	Spring, Drive Plate (1)
59	SFUBZ15R51	Plate, Drive (1)
60	SFQHZ15R56	Spring, Cueing Cam (1)
61	SFUMZ15R60	Cueing Cam (1)
62	SFQPZ15R53	Spring (2)
63	SFUMZ15R51	Lever, Cueing (1)
64	SFQSZ15R51	Rod, Drive (1)
65	SFUMZ15R52	Link, Drive (1)
66	SFUMZ15R56	Pin (6)

Ref. No.	Part No.	Description & Pcs
SCREWS AND WASHERS		
N1 Ⓢ	XTV3+8BFN	Screw ⊕ 3 x 8 (12)
N2	XYN3+F12	Screw ⊕ 3 x 12 (2)
N3	XYC3+CG8	Screw ⊕ 3 x 8 (1)
N4 Ⓢ	XTS3+16BFZ	Screw ⊕ 3 x 16 (1)
N5 Ⓢ	XTV3+30J	Screw ⊕ 3 x 10 (1)
N6	XYE3+EJ10	Screw ⊕ 3 x 10 (2)
N7	XTW3+14QFYR	Screw ⊕ 3 x 14 (5)
N8	SFXGB33N01	Screw (4)
N9	SFXWZ15R51	Washer (8)
N10	SFUMZ15R61	Washer (1)
N11	SFPEV0Q601	Screw Cartridge (1)
N12 Ⓢ	XWC3C	Washer (1)

■ PACKING

Ref. No.	Part No.	Description & Pcs
PACKING PARTS		
P1	SFHPH36X01	Carton Box (1)
P2	SFHHH36M01	Pad, Front (Left) (1)
P3	SFHHH36M02	Pad, Front (Right) (1)
P4	SFHHH36M03	Pad, Rear (Left) (1)
P5	SFHHH36M04	Pad, Rear (Right) (1)

Ref. No.	Part No.	Description & Pcs
P6	SFHKZ15R01	Clamper, Turntable (2)
P7	SFHZH36M01	Pad, Weight (1)
P8	SFHZZ15R02	Clamper, Cord (1)
P9	SFHZZ15R03	Clamper, Tonearm (1)
P10	SFYF30B35	Polyethylene Bag, Turntable Mat (1)
P11	SFHDZ15R01	Pad, Turntable Mat (1)
P12	SFHZD03M01	Sheet (1)

Ref. No.	Part No.	Description & Pcs
P13	SFYH60X60	Polyethylene Bag, Body/Dust Cover (2)
P14	SFYH17X16	Polyethylene Bag, Cord (1)
P15	SFYF05A06	Polyethylene Bag, 45 Adapter (1)

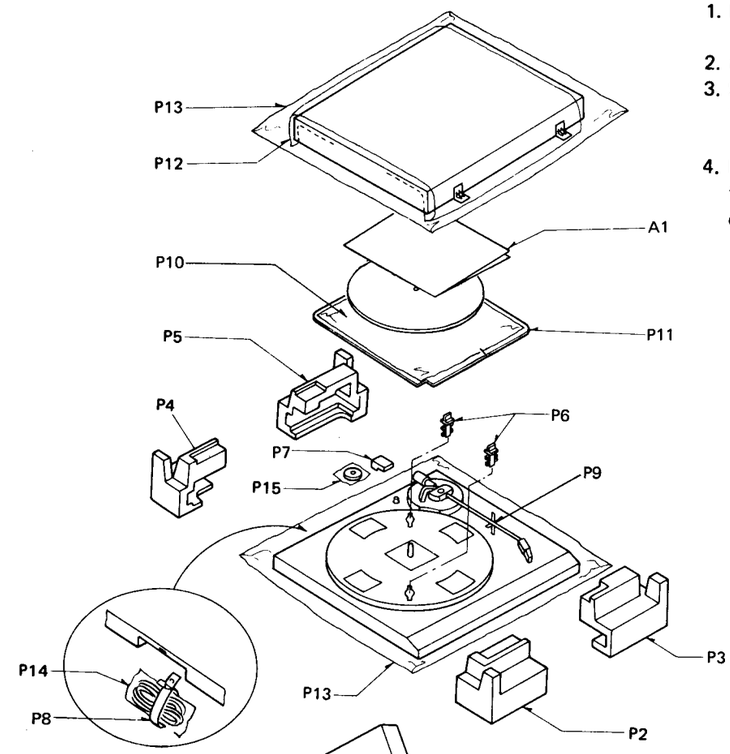

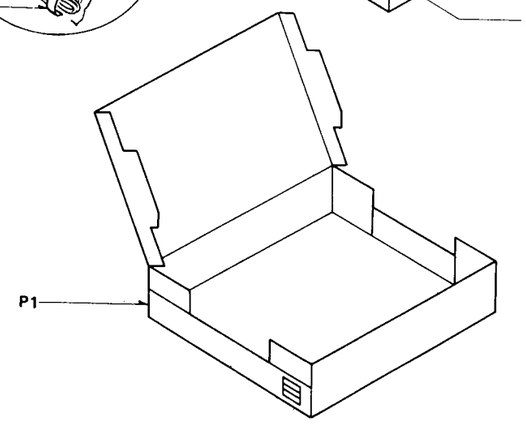

1. Plase the unit (with cushions attached) as illustrated.
2. Fold the flaps according to the line marks.
3. Seal the top with adhesive tape.
   * Use gum tape or adhesive cloth tape of 50mm wide at least.
4. For the edges, first fold the flap "a" and then flap "b", and staple. Remember to staple only flap "b". (Use 15 or 16mm staple)

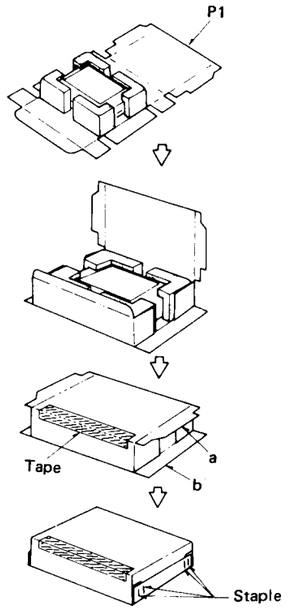

* Stapling positions are shown below.

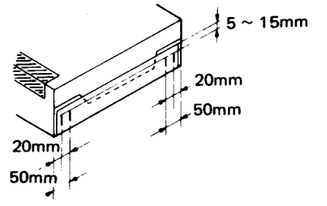

Ref. No.	Part No.	Description & Pcs
ACCESSORIES		
A1	SFNUH36X01	Instruction Book (1)
A2	SFDHEQ1N01	Phono Cord (1)
A3	SFDLZ15R01	Ground Wire (1)
A4	SFWE154A1	Adaptor, 45 r.p.m. (1)
A5 ⚠	SFDAC05X01	AC Cord (1)
A6	SFDKI19118	2 Pin Plug (1)

Printed in Japan
830902300 ⊗ YW